

GOLDMINE SWITCH OPTIONS - Pluto 6 logic board in station 4 ticket door.

Switch machine off before changing settings.

Please note switch bank 1 is the Lower Bank.

Bank 1.

- SW 1 = Trail Velocity Fast
- SW 2 = Trail Velocity Fastest
- SW 3 = Price of Play 20p default
- SW 4 = Price of Play 30p
- SW 5 = Price of Play 50p
- SW 6 = Free Play
- SW 7 = Price of Play on Screen (on to turn off)
- SW 8 = USA VERSION (25c Play with 25c/1c Metering)

Trail 1 + 2 OFF Slow

Price of Play 3,4 +5 OFF 25p Play

Bank 2.

- SW 1 = Percentage See below
- SW 2 = Percenatge See below
- SW 3 = Bourne Option
- SW 4 = Test Player 1
- SW 5 = Test Player 2
- SW 6 = Test Player 3
- SW 7 = Test Player 4
- SW 8 = Adjust Volume – Switch machine Off. Put SW8 On. Switch machine On. When Jackpot screen shows, adjust volume with Station 1 player button. Switch machine Off. Put SW8 Off. Switch machine On.

Percentage:

	35%	40%	45%	50%
SW 1	OFF	ON	OFF	ON
SW 2	OFF	OFF	ON	ON

Bourne (Low) 1 +2 OFF + 3 ON 30%

With SW 8 Bank 1 (USA) on the following switches will now be enabled to set the Coins per play options.

DIL SW	3	4	5	
	off	off	off	- 1 Coin
	off	off	on	- 2 Coins
	off	on	off	- 3 Coins
	off	on	on	- 4 Coins
	on	off	off	- 5 Coins
	on	off	on	- 6 Coins
	on	on	off	- 7 Coins
	on	on	on	- 8 Coins

With SW8 Bank 1 off (UK) they will revert back to the 20p, 30p + 50p UK options.