

SPIDER STOMPIN  
DIP SWITCH SETTINGS

TOP SWITCH SIP4

1	2	3	4	5	6	7	8
X	X	O	O	O	X	X	X

1	2	3	4	5	6	7	8
O	X	O	O	X	O	O	X

NOTE: IN THE SPIDER STOMPIN AT KIDS IN ACTION THE ON OF THE DIP SWITCHES IS UP. SO MAKE SURE THE ADJUSTMENTS ARE DONE ACCORDINGLY.

IN THE TABLE ABOVE THE X'S ARE OFF AND THE O'S ARE ON.