

2 Player

USA Edition

(Coin-In, Ticket Out, Optional Swipe Facility)

Produced by :

*Harry Levy Amusement Contractor Ltd
Patricia Way
Pysons Road Industrial Estate
Broadstairs
Kent CT10 2LF*

*Tel 0044 1843 866 464
Fax 0044 1843 860 144
email: sales@harry-levy-amusements.com*

Distributed in the United States of America by:

*Coastal Amusement Distributors Inc.
601 Prospect Street
Lakewood N.J. 08701*

*Tel 908 905 6662
Fax 908 905 6815
email: sales@coastalamusements.com*

8 Spare Parts List

This spares list is by no means fully comprehensive; since to provide the full listing would require another volume! The following are some of the more commonly required items that you may need. If the item you require is not listed, please contact either your distributor or Harry Levy Amusements and we will be pleased to assist you.

| <u>Description</u> | <u>Harry Levy Stock Number</u> |
|----------------------------------|--------------------------------|
| 201 lock & keys | 6278 |
| 301 lock & keys | 6087 |
| Accuride pusher box slide | 6081 |
| Change board | 8988 |
| Circuit Breaker 1.5A | 8878 |
| Circuit Breaker 3A | 8879 |
| Circuit Breaker 4A | 8880 |
| Circuit Breaker 5A (mains) | 8713 |
| Circuit Breaker 5A | 8878 |
| Circuit breaker 7.5A (mains) | 8714 |
| Electronic alarm board | 7819 |
| Fan 12 VDC | 8624 |
| Flashing Lights board (2 player) | 22413 |
| Hopper 25c | 8676 |
| Interface board – coin optos | 8393 |
| Logic/ticket board | 8698 |
| Microphone board | 8498 |
| Motor 115V 60Hz (coin slide) | 22142 |
| Motor 115V 60Hz (pusher) | 8567 |
| Motor control board | 8321 |
| Motor Opto board | 8318 |
| Opto – dual beam coin in | 8392 |
| Power supply 12V 100W | 8859 |
| Power supply 24V 100W | 8860 |
| Power supply 48V 100W | 22311 |
| Sound board | 22379 |
| Speaker | 6979 |
| Switch - ON / OFF / ON | 8712 |
| Switch - pendulum tilt | CC004 |
| Switch - reset | 6127 |
| Switch – slam tilt | 6149 |
| Tilt board | 6099 |
| Transformer Dichroic 200VA | 8978 |

Optional Skill Facility - additionally required items:

| | |
|--------------------------------|------|
| Switch – skill push | 6280 |
| Flasher unit – switch mounting | 7161 |

Other items may be available on request.

7.2 Systems Checking

When a fault occurs that affects the whole of the machine, the power supply and regulation system should be investigated first.

Check the input, and output fuses.

Refer to schematics and drawings to check power connections, voltages etc.

If the fault is not visual, or easily measurable it is often helpful to disconnect the outputs from the PSU, check that the PSU is functioning then connect the loads one at a time.

It is easy to identify the faulty system, then use a similar technique within that system (such as disconnecting all hoppers) to identify the faulty component.

7.3 Basic Checks

| <u>Symptom</u> | <u>Possible Fault</u> | <u>Remedy</u> |
|-------------------------|---|--|
| Will not start | Internal switch OFF CB Tripped | Check internal switch is ON Check circuit breakers. |
| No sound | Volume Speaker Sound board | Adjust volume Check wiring. Replace if faulty Check power supply & connectors, replace board if faulty. |
| Light failed | Tube failed Starter failed Choke (ballast) failed | Check end caps & wiring Replace tube. Replace with same type. Replace with same rating. |
| Pusher boxes not moving | Power to motor Mechanical jam | Check for coins or swag causing jam. Clear & reset. |
| Tilt alarm not working | Pendulum stuck Door bump sensor Sounder Tilt P.C.B | Check pendulum & adjust. Check & adjust. Test connections & power Check connections & power. |
| Counter not working | Wiring Counter Opto sensor | Check connectors & loom Bench test / replace. Check every opto sensor. |
| Hopper not working | Hopper motor. Power. Jammed. | Bench test with power supply. Check supply & connections. Check for obstruction. |

7 Fault Finding

7.1 Methodology

It is of mutual interest that your pusher is kept in excellent working condition, therefore when required please order original replacement parts from your distributor or Harry Levy Amusement Contractor Ltd.

If a fault occurs with any electrical system **SWITCH THE MACHINE OFF**. Check that:-

- a) There is a suitable mains supply.
- b) All fuses are intact.
- c) All plugs and sockets are correctly mated.
- d) No wires are trapped, damaged or broken.
- e) All wires are properly secured to their terminals and pins.

Wiring check.

A visual inspection will reveal the general condition of the wiring. A more thorough test using a continuity tester will be needed to check apparently intact wires, however once a machine has been playing successfully for some time wiring is not usually at fault.

Device testing.

Disconnect the machine from the mains supply then check the physical condition and operation of the suspect device (remove from the machine if necessary). Bench test if possible using a suitable power supply.


In general PCB's are not user serviceable. Should a problem develop indicating a board fault it is recommended that the board be returned to your distributor/Harry Levy for repair.

6.2 Coin Entry

Each player section has three coin entry chutes. The chutes are designed to reject fraud coins into a reject tray just inside the door.

This is not a high level of discrimination, but serves well and reliably in this application. Other than keeping the chutes clear and clean no specific maintenance is required. Coin detection is done electronically (see other section of this manual)

Coin entry chutes are situated on the front of the machine. The two outer entry points feed fixed chutes in to the top of the playfield Perspex. The center chute feeds in to a moving coin slide. This slide is continuously oscillating to and fro as a result of a motorised eccentric crank assembly, mounted on the rear of the Perspex. It is possible to incorporate a 'skill-stop' feature to the machine that allows the player to stop the moving chute in any desired position, simply by pressing a switch. Much of the required electrical controls for this additional feature have already been fitted in the machine, and it is a simple matter to add this additional feature to your machine (see other section in this manual).

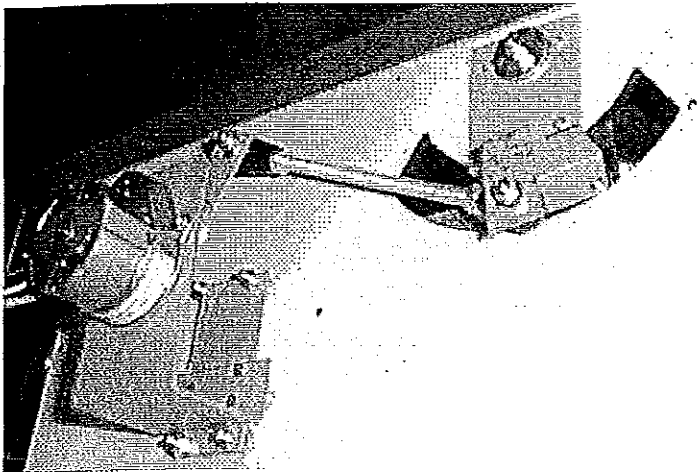

Rear View – Motor & Crank Assembly



Front View – Coin Slide

6.3 Pusher boxes


The pusher boxes are mounted on two Accuride slide bearings. An annual check to remove any build up of dust, and a light coat of grease will ensure many years of reliable service.

Ensure that the coin scraper system is fully intact and working smoothly and freely, replace any suspect parts.

The control of the motor cut off point may be set by way of a 4 way DIP switch mounted on the motor control board thus (located in the power supply unit):

| Pole | 1 | 2 | Response |
|------|-----|-----|-------------|
| | off | off | Fastest |
| | on | off | 2nd Fastest |
| | off | on | 2nd Slowest |
| | on | on | Slowest |

| Pole | 3 | 4 | Stop Resistance |
|------|-----|-----|-----------------|
| | off | off | Weakest |
| | on | off | 2nd Weakest |
| | off | on | 2nd Hardest |
| | on | on | Hardest |

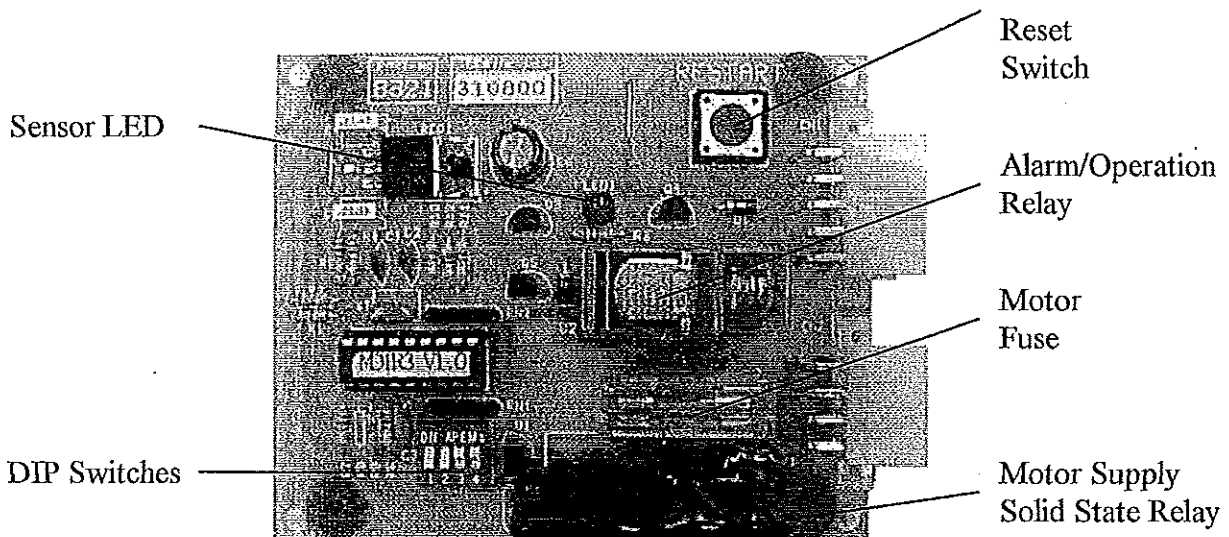

When the system operates and stops the motor, the supply to the motor remains off until manual reset is initiated. This creates the opportunity to ensure the machine is in a safe state to re-start; a visual check by the attendant ensuring that there is no longer any item causing the obstruction. Reset of the system is achieved by depressing the remotely located reset switch (mounted through the rear wall of the machine, top right).

There is an LED on the Motor Control PCB, which indicates the output of the opto-sensor. In normal operation this will appear to be continuously ON, due to the high repetition rate of the pulses. This facility may be used to check the operation of the sensors, by manually rotating the motor shaft and observing the LED. The LED should turn on then off as the hole in the shaft passes between the sensors.

The 20mm fuse on this PCB is to provide over current protection to the solid-state relay/motor combination, and should only be replaced with an identical device.

The other relay (RL1) is used to provide a switching function upon system operation, which is used for signalling to other circuits for alarm operation etc.

5.0 Cabinet Lighting

5.1 Fluorescent Lighting

WARNING – Dangerous Voltages (115v) - switch OFF prior to replacing!

Fluorescent tube lighting is situated in the top sign area and the Coin-Entry area. Lighting trays for both of these are located in the top sign.


5.2 Dichroic Lighting

Low voltage dichroic spot lamp lighting is situated at the top of each playfield. These lamps are easily replaced by simply pulling the old bulb free from the fitting, and pushing the replacement bulb back in place. These lamps are rated at 35 Watts, and should only be replaced with a similarly rated lamp. The lamps are powered from a transformer unit, located in the base of the machine (see 'power supplies' section of this manual)

WARNING - These lamps become very hot in operation - allow to cool before handling!

4.13 Top Sign Flashing Lights Board

Located in the top sign, this board controls the display of the 'Elvis' panel light display. This board does have a bank of DIP switches fitted, but they serve no purpose and there are no user settings associated with this board.

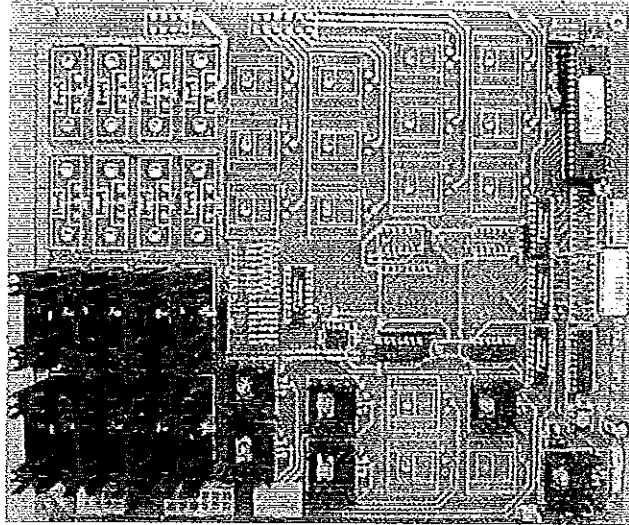


Flashing Lights Control Board

The flashing lamps control board used in the 2 player machine is a component de-populated version of the board used in the six player machine; thus the free space on the board.

The lamps fitted in the top sign panel displays are 12V 1.2W 0.1A 10mm Wedge type. These lamps are multiplexed and driven from a 48V power rail in order to achieve high brightness given the repetition switching. The 48VDC power supply is located in a separate enclosure, located in the base of the machine (see 'power supplies' section in the manual).

4.12 Skill Stop Facility

Some users may wish to incorporate a 'skill' facility to their machines, where the player is able to temporarily stop the movement of the centre coin-chute in any desired position, prior to inserting a coin. Most of the required control circuitry for this facility has already been incorporated in to the machine, so installation of this option is straight forward to the end user should it be required.

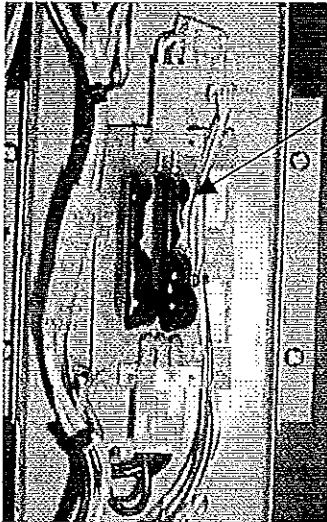

Dual Solid State
Relay Board

Mounted on the intersection upright in the rear of the machine is a grounded metal enclosure that houses the control electronics for this facility. This basically consists of a solid-state relay controlling the electrical supply to the coin-chute motor.

These relays are pre-loomed in to the machine, and all that is required is the installation of a switch in each section coin entry area. All looming to these switches is already in place (currently fitted with shorting links in place of the switches). Facility is also provided for an electrical supply to illuminate the switches.

Suitable switches, together with a built in lamp flasher unit, are available from your machine distributor. *Note:* Installation requires the cutting of the required hole in the coin entry door. Electrical connection is by way of push fit fast-on type blade connectors. Sufficient length of cable is provided to reach a door-mounted switch, and this has been secured to existing looms in order to keep tidy. These cable ties may be cut to release these cables.

The pre-loomed wire colors are as follows:

Black and White/Trace = normally closed switched contacts – shorting link currently installed.

Red = +12 Volt DC for lamp drive (via optional flasher unit). Lamp type 12V 1.2W.

White/Trace = 0 Volt for lamp drive (switched – lamp extinguishes on pressing switch).

For the part numbers of switches and flasher units, see spares listing section in this manual


4.10 Counters

Electro-mechanical counters are provided in each player section, located in the coin entry compartment of each section. These counters record the number of coins in and tickets issued. Taking readings of these counters regularly will obviously facilitate the monitoring of the machine performance and assist in cash accounting.

4.11 Swipe Change Facility (Optional Fit)

If the machine was purchased with the optional facility to interface with a swipe card change facility, then a change board and interface relay will have been installed. This is 'interface' circuitry, and the swipe card system needs to be installed by a trained person. The supplied installation basically provides for a pulsed input, inhibit relay output and payout hopper control.

There is a free ended yellow wire which is the pulse input (black wire is the zero volt reference for this input) and a green and grey pair of wires which are the volt free contacts of the inhibit relay. These lengths of wire are coiled and secured with cable ties to adjacent machine looming.

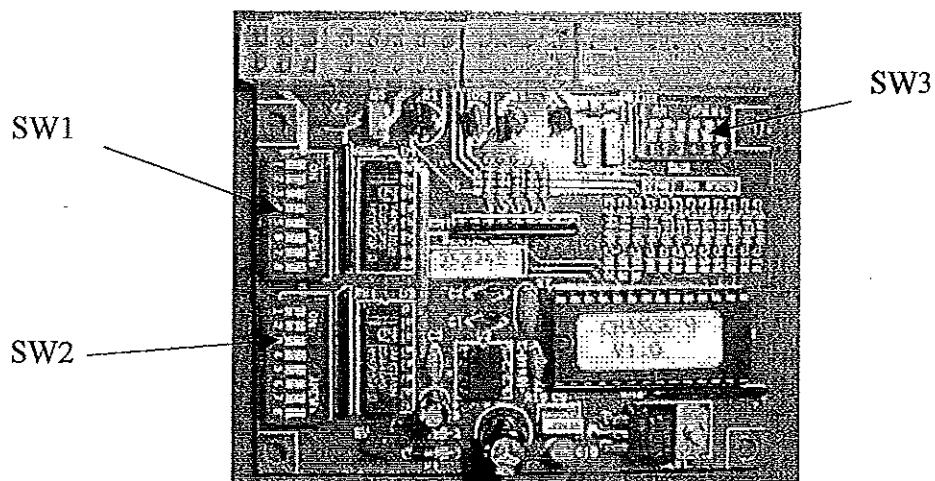

Change Board

Program: CHANGE19 V1.4

SW1

| <u>Poles</u> | | | | | | | | <u>Function</u> |
|--------------|----------|----------|----------|----------|----------|----------|----------|---|
| <u>1</u> | <u>2</u> | <u>3</u> | <u>4</u> | <u>5</u> | <u>6</u> | <u>7</u> | <u>8</u> | |
| off | off | off | off | off | - | - | - | Poles 1-5 = No. Pulses Out 1-32 pulses (Binary + 1) |
| on | on | on | on | on | - | - | - | |
| | | | | | on | - | - | Swipe Mode On |
| | | | | | off | - | - | Swipe disabled |

SW2


Not Used

SW3

Not Used


4.8 Alarm Board

Located in the topsign, this board drives a sounder to produce the alarm tone for tilt, motor jam etc.

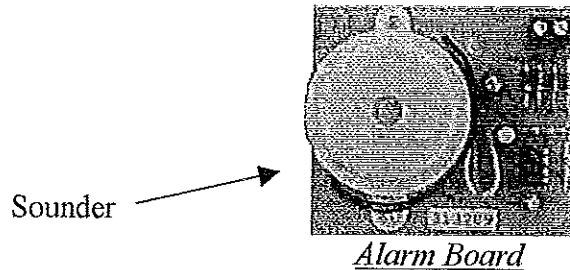


4.9 Coin-In Sensing

Coins are entered via one of three coin entry chutes and pass through a dual beam optical sensor. The coins must be seen to break the first beam, then the second, clear the first and then the second, all within a set time frame for the coin of play. This system prevents fraudulent attempts to 'strim' the coin-in sensor with strips of plastic etc. inserted into the coin entry.

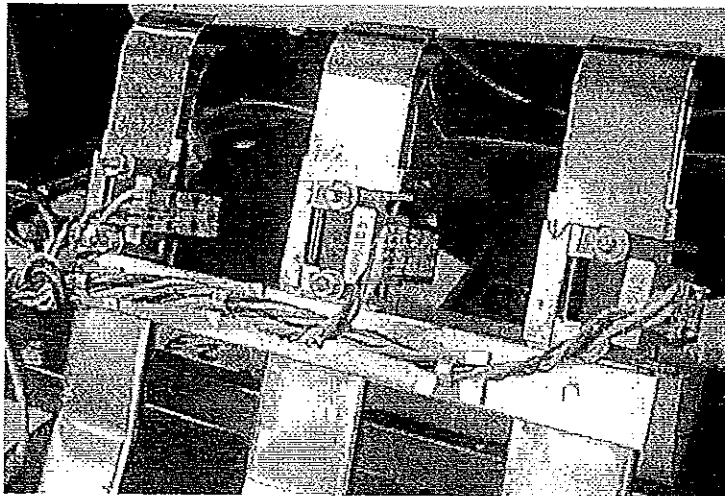

Triple 'Dual-Beam' Opto Coin-In Sensors

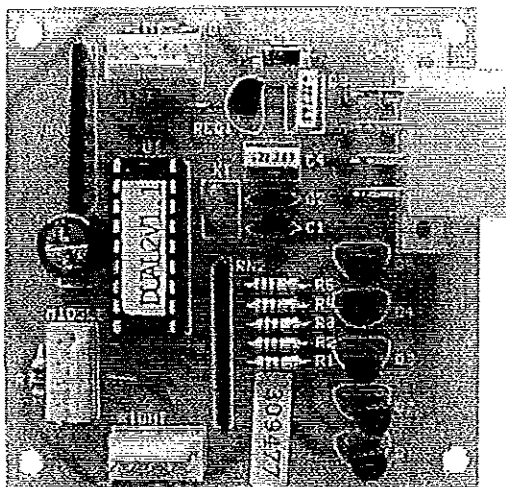


Coin-In Interface Board

The control and interpretation of these sensors is undertaken by the 'Coin-In Interface' Board. This board is located on the shelf of the coin entry area in each player section of the machine. This board processes the signals from the dual-beam sensors, and in the case of a valid coin entry, generates a single output pulse, which is directed to the section main logic board, activating the game.

Program: DUAL2 V1.1

4.6 Hopper Microphone Board


Each player section has a Piezo coin detector microphone. The Piezo microphone is part of the win chute assembly. The sound detector PCB is located in the lower cabinet of each section on the left hand side wall.

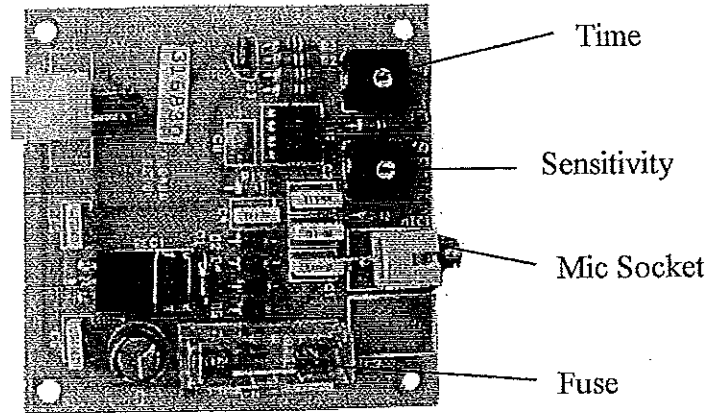

Microphone PCB (Sound Detector)

4.7 Tilt board

The Tilt board is located in the power supply enclosure located in the base of the RHS. This board has a pendulum tilt device (located in the top sign) and the slam tilt switches as its inputs. Should any one of these inputs be activated, the tilt board immediately activates an audible alarm (located in the top sign) and switches off the mains lighting in the top sign, so as to indicate which machine is being tampered with. Provided there are no further inputs, the tilt alarm condition will only remain active for a short period of time, when it will then automatically reset.

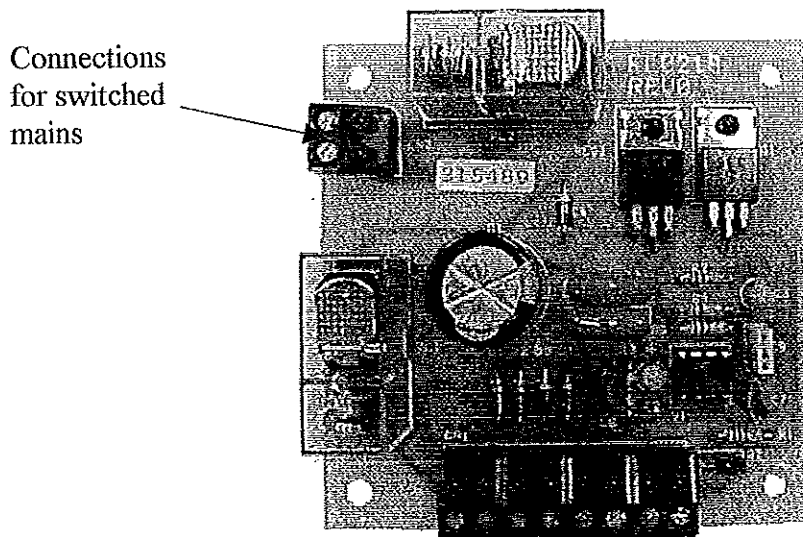

Tilt Board

Continued...

DIP-Switch settings

| <u>Pole</u> | <u>1</u> | <u>2</u> | <u>3</u> | <u>Select</u> |
|-------------|----------|----------|----------|--------------------------------|
| | off | off | off | No attract music |
| | on | off | off | 30 sec attract music interval |
| | off | on | off | 60 sec attract music interval |
| | on | on | off | 90 sec attract music interval |
| | off | off | on | 120 sec attract music interval |
| | on | off | on | 150 sec attract music interval |
| | off | on | on | 180 sec attract music interval |
| | on | on | on | 210 sec attract music interval |

| <u>Pole</u> | <u>4</u> | <u>5</u> | <u>6</u> | <u>Coin-In Sound</u> |
|-------------|----------|----------|----------|--|
| | off | off | x | One sound (Guitar) |
| | off | on | x | Two alternate sounds (clarinet & Piano) |

x = 'don't care' – on or off

Pole 4 'on' gives a test mode of the attract sounds (virtually continuous). In standard operation this pole should remain 'off'.

Loudspeaker

The loud speaker is located in the top of the coin entry area. It is rated at 8 Ohms 25 watts.

4.5 Hoppers

The hopper fitted in each player section beneath the win chute is a 'count' hopper. This hopper is used solely to count the number of coins that fall over the edge of the playfield, directing it's output to the cashbox. This hopper does not need initial priming with coins and should always 'run to empty'. Each section hopper is controlled in its operation by the 'ticket board'.

Machines fitted with the optional 'Swipe/Change facility also have an additional 'payout' hopper utilised solely for this system. This hopper does need initial priming, and is subsequently topped up by the output of the count hopper.

Ticket board switch settings cont'...


DIP Switch 2

Poles 1-4: Payout ratio - No. coins over the edge for award.

| <u>1</u> | <u>2</u> | <u>3</u> | <u>4</u> | <u>Qty Coins</u> |
|----------|----------|----------|----------|------------------|
| off | off | off | off | 1 |
| on | off | off | off | 2 |
| off | on | off | off | 3 |
| on | on | off | off | 4 |
| off | off | on | off | 5 |
| on | off | on | off | 6 |
| off | on | on | off | 7 |
| on | on | on | off | 8 |
| off | off | off | on | 9 |
| on | off | off | on | 10 |
| off | on | off | on | 11 |
| on | on | off | on | 12 |
| off | off | on | on | 13 |
| on | off | on | on | 14 |
| off | on | on | on | 15 |
| on | on | on | on | 16 |

4.4 Sound Board

The sound board is located in section two on the LHS web.

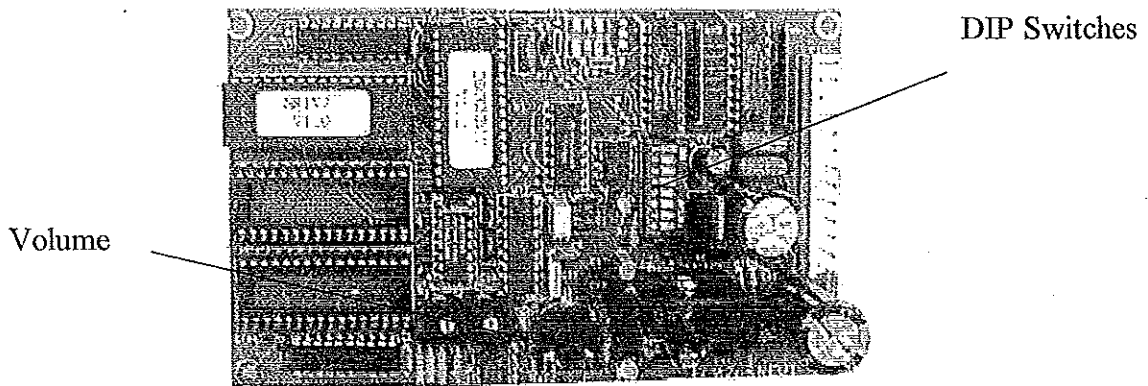


Sound Board

| | | | |
|----------|---------|----------|------|
| Program: | PIC: | QSOUND48 | V1.0 |
| | EPROMS: | ELVIS_A1 | V1.0 |
| | | ELVIS_A2 | V1.0 |
| | | ELVIS_A3 | V1.0 |

Continued...

4.2 Ticket/Logic Board

The Ticket board is the 'game processor' of each player section. It is located on the left hand side web of each section lower compartment.

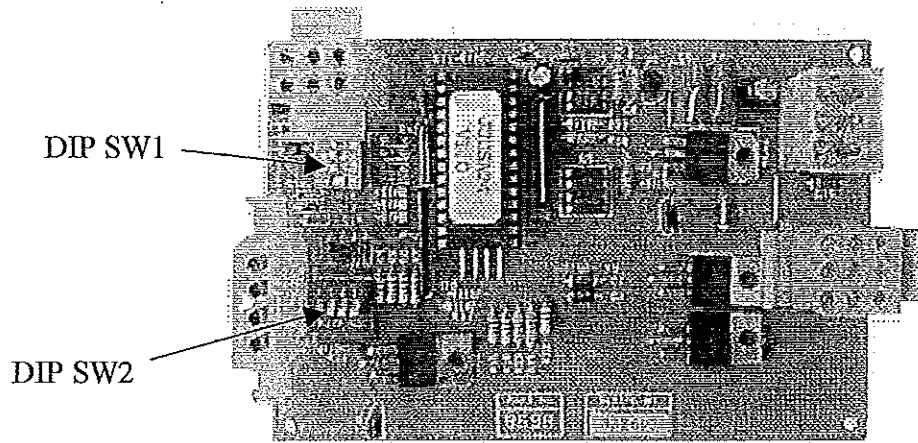

Ticket Board

Program: JJUSA24 V1.1

DIP Switch Settings:


DIP Switch 1

Poles 1-3: Consolation awarded on coin entry

| <u>1</u> | <u>2</u> | <u>3</u> | <u>Qty Award</u> |
|----------|----------|----------|------------------|
| off | off | off | 0 |
| on | off | off | 1 |
| off | on | off | 2 |
| on | on | off | 3 |
| off | off | on | 4 |
| on | off | on | 5 |
| off | on | on | 6 |
| on | on | on | 7 |

Pole 4: OFF -Token award for coins won
 ON -Ticket award for coins won

cont'...

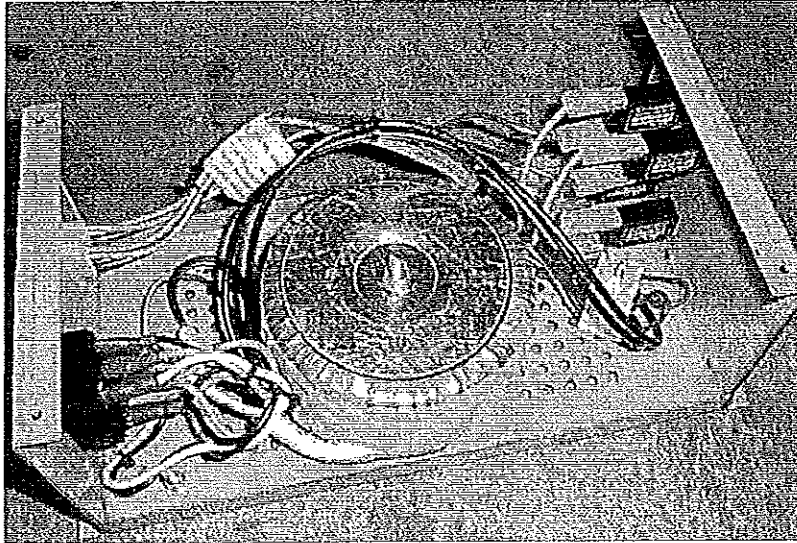

Dichroic Transformer Unit

The PSU's are enclosed switch-mode types. The enclosure with the two PSU's contains the 12V and 24 V units, whilst the third unit contains a 48V (multiplexed top sign lighting) and two circuit boards. These boards are the Motor control and Tilt board, and are housed within the enclosure due to the presence of mains (line) voltage on each board.

3.3 General Maintenance & Care

The Elvis is a robust and reliable machine, which looked after will give years of profitable service. Regular cleaning is the key to optimum condition and performance.

To maintain all visible surfaces in an 'as new condition':

3. Plastic and Glass Fibre - use a general purpose (non aggressive) water based detergent and finish with a quality furniture polish.
2. Laminated Cabinet trims - clean with an all purpose non-aggressive cleaner and finish to a high gloss using a furniture polish.
3. Glass and Chrome - clean with a quality window cleaning solution.

Do not use caustic or abrasive cleaners. Always use cleaning products in accordance with the manufacturers instructions.

The Elvis utilises 'sealed for life' type bearings and a high quality mechanical components that do not require regular greasing or regular servicing.

It is recommended an initial inspection be carried out after approximately two months usage, to check for any signs of wear on the moving parts. Adjust as required, and thereafter inspect annually.

Top-Sign

Front

The artwork panels may be unscrewed and removed, permitting access to the top sign.

Rear

Release the lock at the top of the door, hinge backward and lift clear.

3.1 The Game

Attract Mode

When not in active play, the machine lighting and pusher box mechanism operate continuously. The attract tune is played at intervals dependant on the settings made on the Sound Board

Active Play Mode

When coins of the correct type are inserted into a coin entry chute they are detected by an optical sensor activating that particular player section and then pass down the pin perspex to the playfield. Coins of the incorrect type fall through the chute and are collected in the reject trays, not activating the sensors.

When the player section is active, coins over the edge are detected by a microphone connected to the win chute, which in turn activates the count hopper. The coins are counted in to the cash box, and the count processed to generate the award of redemption tickets. After coin entry, a player section remains enabled for approximately 20 seconds, allowing the player the full benefits from the effects of his coin.

Coins in and tickets out are recorded on separate electro-mechanical counters. It is recommended that readings of these counters be taken regularly, to establish a clear pattern of usage/profit and thus any significant deviations may highlight a fault condition requiring attention.

3.2 Priming The Playfields With Coins.

Each player section requires approximately 800 coins, of which the first 750 may be hand placed on the playfield. The final 50 for each section should be played in to the machine via the coin entry slots in order to achieve the best possible visual appearance of the playfield area.

Remember to record the coin counter readings after priming for your records.

1.1 Receipt Of Machine

Upon receipt of machine carefully remove all protective packaging and establish machine on a flat and level floor. Take care to protect the machine from sudden shocks etc. when lifting or manhandling.

The machine should only be situated indoors, and should not be subjected to any other environments. Ensure all ventilation grills have at least 4" (100mm) clearance from other surfaces to permit adequate cooling.

1.2 Electrical Connection

The Elvis machine should be connected to the mains supply via a suitable plug to suit your installation requirements (Ref: Section 2.1). A competent trained person should always carry this out. If in any doubt, consult a qualified electrician.

| | | |
|---------------|---------|--------------|
| Mains wiring: | Live | Black |
| | Neutral | White |
| | Earth | Green/Yellow |

THIS MACHINE MUST BE EARTHED/GROUNDED

1.3 Electrical Supply Entry

This machine may have the electrical supply connected either at the base or at the very top, as best suits the location in which the machine is situated. The base feed entry socket is located in the base skirt of the machine below section 1 cash box door. The top feed entry socket is located on the top surface of the top sign.

The On/Off switch for the machine is located in section 1 lower compartment. The switch is a three-position switch, with the central position being 'Off'. Left and right of this position are 'On - Top Feed' and 'On - Bottom Feed' respectfully.